

NuMicro® Family**Arm® Cortex®-M0-based Microcontroller**

NuMaker-M091YD

User Manual

Evaluation Board for NuMicro® M091 Series

The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.

Nuvoton is providing this document only for reference purposes of NuMicro microcontroller and microprocessor based system design. Nuvoton assumes no responsibility for errors or omissions.

All data and specifications are subject to change without notice.

For additional information or questions, please contact: Nuvoton Technology Corporation.

www.nuvoton.com

Table of Contents

1 OVERVIEW	7
2 FEATURES	8
3 HARDWARE CONFIGURATION.....	9
3.1 Front View.....	9
3.2 Rear View	10
3.3 Extension Connectors.....	11
3.3.1 Pin Assignment for Extension Connectors	11
3.3.2 Arduino UNO Compatible Extension Connectors.....	14
3.4 Power Supply Configuration	16
3.4.1 VIN Power Source.....	16
3.4.2 5 V Power Sources	16
3.4.3 3.3 V Power Sources	17
3.4.4 1.8 V Power Sources	17
3.4.5 Power Connectors.....	17
3.4.6 USB Connectors.....	18
3.4.7 Power Switches	18
3.4.8 Power Supply Models	18
3.5 External Reference Voltage Connector.....	22
3.6 Ammeter Connector.....	22
3.7 Push Buttons.....	23
3.8 LEDs.....	23
3.9 Nu-Link2-Me.....	23
3.9.1 VCOM Switches.....	23
3.9.2 Status LEDs	24
3.10 CAN Bus Interface.....	24
4 QUICK START	26
4.1 Toolchains Supporting	26
4.2 Nuvoton Nu-Link Driver Installation	26
4.3 BSP Firmware Download	28
4.4 Hardware Setup.....	28
4.5 Find the Example Project	30
4.6 Execute the Project under Toolchains	30
4.6.1 Keil MDK.....	30
4.6.2 IAR EWARM.....	34
5 NUMAKER-M091YD SCHEMATICS	36

5.1 Nu-Link2-Me	36
5.2 NuMaker-M091YD Schematics	37
5.3 Extension Connectors	38
5.4 PCB Placement	39
6 REVISION HISTORY	40

List of Figures

Figure 1-1 NuMaker-M091YD Evaluation Board.....	7
Figure 3-1 Front View of NuMaker-M091YD.....	9
Figure 3-2 Rear View of NuMaker-M091YD	10
Figure 3-3 M091 Extension Connectors	11
Figure 3-4 Arduino UNO Compatible Extension Connectors	14
Figure 3-5 External Power Supply Sources on Nu-Link2-Me.....	18
Figure 3-6 External Power Supply Sources on M091 Target Board.....	19
Figure 3-7 Detach the Nu-Link2-Me from NuMaker-M091YD.....	20
Figure 3-8 Wiring between Ammeter Connector and Ammeter	22
Figure 3-9 Project Path of SYS_PowerDown_MinCurrent	22
Figure 4-1 Nu-Link USB Driver Installation Setup.....	26
Figure 4-2 Nu-Link USB Driver Installation	27
Figure 4-3 Open VCOM Function.....	28
Figure 4-4 ICE USB Connector.....	28
Figure 4-5 Device Manger	29
Figure 4-6 PuTTY Session Setting.....	29
Figure 4-7 Template Project Folder Path.....	30
Figure 4-8 Warning Message of “Device not found”	30
Figure 4-9 Project File Migrate to Version 5 Format.....	31
Figure 4-10 Debugger Setting in Options Window.....	31
Figure 4-11 Programming Setting in Options Window	32
Figure 4-12 Compile and Download the Project.....	32
Figure 4-13 Keil MDK Debug Mode	33
Figure 4-14 Debug Message on Serial Port Terminal Windows	33
Figure 4-15 IAR EWARM Window.....	34
Figure 4-16 Compile and Download the Project.....	34
Figure 4-17 IAR EWARM Debug Mode	35
Figure 4-18 Debug Message on Serial Port Terminal Windows	35
Figure 5-1 Nu-Link2-Me Circuit.....	36
Figure 5-2 M091 Target Board Circuit.....	37
Figure 5-3 Extension Connectors Circuit.....	38
Figure 5-4 Front Placement.....	39

Figure 5-5 Rear Placement..... 39

List of Tables

Table 3-1 Extension Connectors	11
Table 3-2 M091 Full-pin Extension Connectors and GPIO Function List	13
Table 3-3 Arduino UNO Extension Connectors and M091 Mapping GPIO List.....	15
Table 3-4 Vin Power Source	16
Table 3-5 5 V Power Sources.....	16
Table 3-6 3.3 V Power Sources	17
Table 3-7 1.8 V Power Sources	17
Table 3-8 Power Connectors	17
Table 3-9 USB Connectors	18
Table 3-10 Power Switches	18
Table 3-11 Supply External Power through Nu-Link2-Me	19
Table 3-12 Supply External Power for M091 Target Board.....	21
Table 3-13 External Reference Voltage Connector.....	22
Table 3-14 Ammeter Connector	22
Table 3-15 Push Buttons	23
Table 3-16 LEDs	23
Table 3-17 VCOM Function of Nu-Link2-Me	23
Table 3-18 Operation Status LED Patterns	24
Table 3-19 CAN Bus Interface.....	25

1 OVERVIEW

The NuMaker-M091YD is an evaluation board for Nuvoton NuMicro M091 series microcontrollers. The NuMaker-M091YD consists of two parts: an M091 target board and an on-board Nu-Link2-Me debugger and programmer. The NuMaker-M091YD is designed for project evaluation, prototype development and validation with power consumption monitoring function. The NuMaker-M091YD is suitable for analog sensor applications developing which need OPA operation.

The M091 target board is based on NuMicro M091YD2AE. For the development flexibility, the M091 target board provides the extension connectors, the Arduino UNO compatible headers and the capability of adopting multiple power supplies. Furthermore, the Nuvoton-designed ammeter connector can measure the power consumption instantly, which is essential for the prototype evaluation. Additionally, the M091 target board implements OPA function.

In addition, there is an attached on-board debugger and programmer “Nu-Link2-Me”. The Nu-Link2-Me supports on-chip debugging, online and offline ICP programming via SWD interface. The Nu-Link2-Me supports virtual COM (VCOM) port for printing debug messages on PC. Besides, the programming status could be shown on the built-in LEDs. Lastly, the Nu-Link2-Me could be detached from the evaluation board and become a stand-alone mass production programmer.

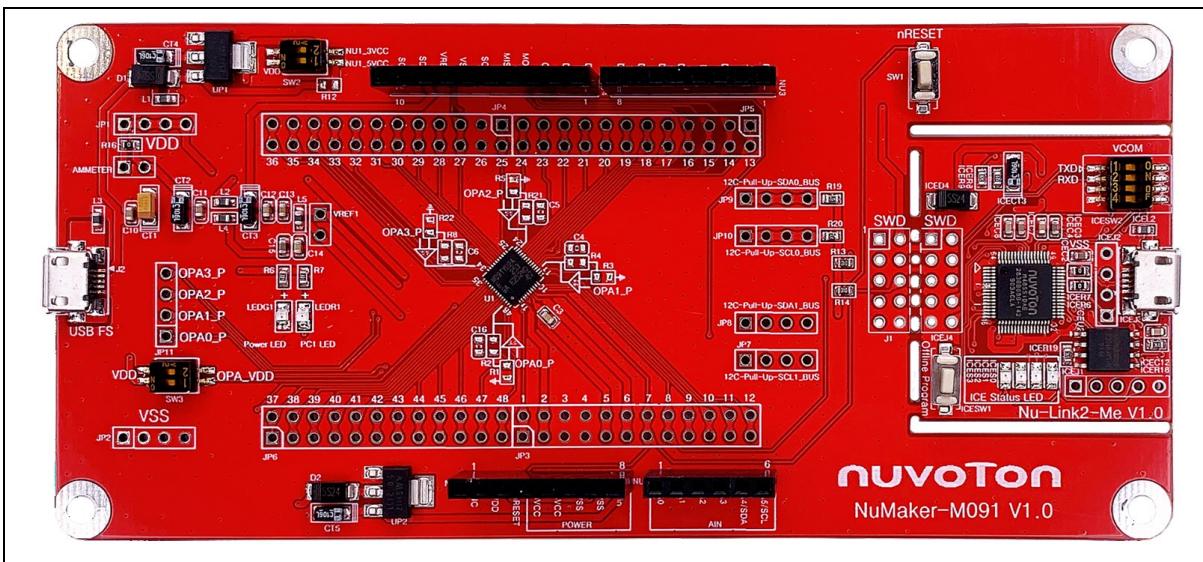


Figure 1-1 NuMaker-M091YD Evaluation Board

2 FEATURES

- NuMicro M091YD2AE used as main microcontroller with function compatible with:
 - M091TC2AE
 - M091TD2AE
 - M091YC2AE
 - M091TD2AE
- M091 full pins extension connectors
- Arduino UNO compatible extension connectors
- Ammeter connector for measuring the microcontroller's power consumption
- Flexible board power supply:
 - External V_{DD} power connector
 - Arduino UNO compatible extension connector Vin
 - USB FS connector on M091 target board
 - ICE USB connector on Nu-Link2-Me
- On-board Nu-Link2-Me debugger and programmer:
 - Debug through SWD interface
 - Online/offline programming
 - Virtual COM port function

3 HARDWARE CONFIGURATION

3.1 Front View

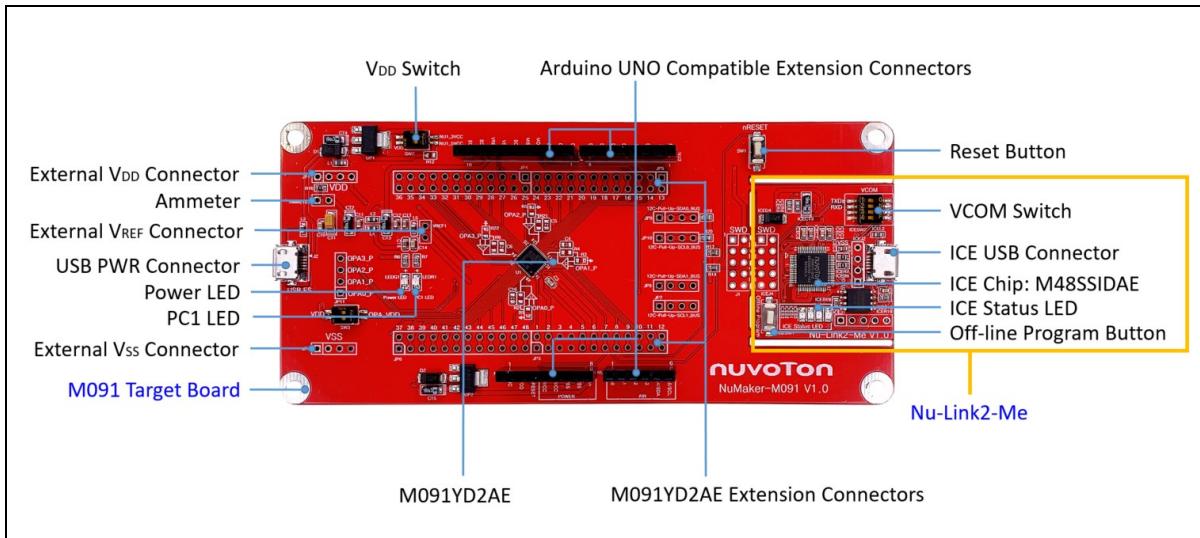


Figure 3-1 Front View of NuMaker-M091YD

Figure 3-1 shows the main components and connectors from the front side of NuMaker-M091YD. The following lists components and connectors from the front view:

- Target chip: M091YD2AE (U1)
- USB PWR Connector (J2)
- Arduino UNO Compatible Extension Connectors (NU1, NU2, NU3, NU4)
- M091 Extension Connectors (JP3, JP4, JP5 and JP6)
- External V_{DD} Power Connector (JP1)
- External V_{SS} Power Connector (JP2)
- External V_{REF} Connector (VREF1)
- V_{DD} Switch (SW2)
- Ammeter Connector (AMMETER)
- Reset Button (SW1)
- Power LED and PC1 LED (LEDG1 and LEDR1)
- Nu-Link2-Me
 - VCOM Switch
 - ICE Chip: M48SSIDAE (ICEU2)
 - ICE USB Connector (ICEJ3)
 - ICE Status LED (ICES0, ICES1, ICES2, ICES3)
 - Off-line Program Button (ICESW1)

3.2 Rear View

Figure 3-2 shows the main components and connectors from the rear side of NuMaker-M091YD.

The following lists components and connectors from the rear view:

- Nu-Link2-Me
 - MCUVCC Power Switch (ICEJPR1)
 - ICEVCC Power Switch (ICEJPR2)

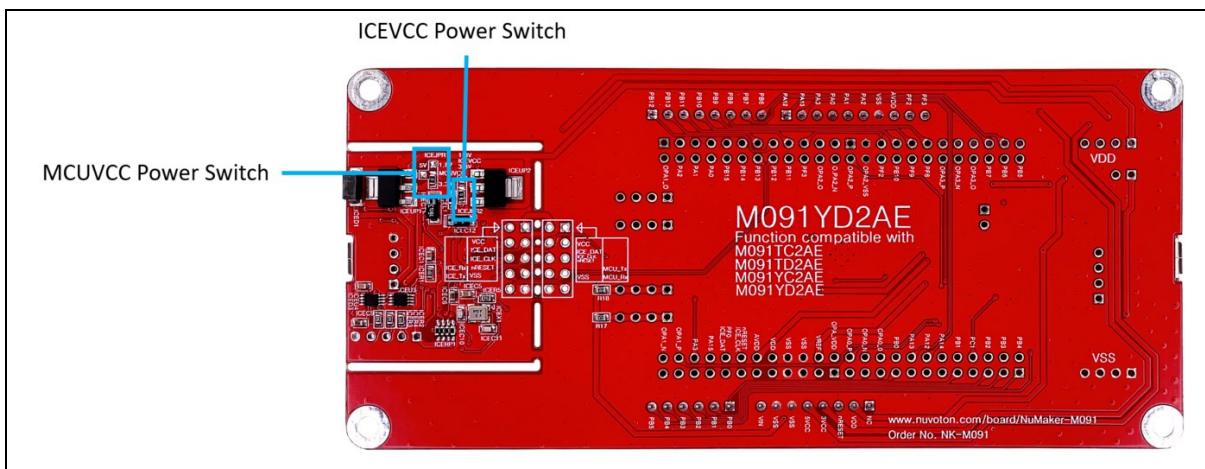


Figure 3-2 Rear View of NuMaker-M091YD

3.3 Extension Connectors

Table 3-1 presents the extension connectors.

Connector	Description
JP3, JP4, JP5 and JP6	Full pins extension connectors on the NuMaker-M091YD.
NU1, NU2, NU3 and NU4	Arduino UNO compatible pins on the NuMaker-M091YD.

Table 3-1 Extension Connectors

3.3.1 Pin Assignment for Extension Connectors

The NuMaker-M091YD provides the M091 onboard and extension connectors (JP3, JP4, JP5 and JP6). Figure 3-3 shows the M091 extension connectors.

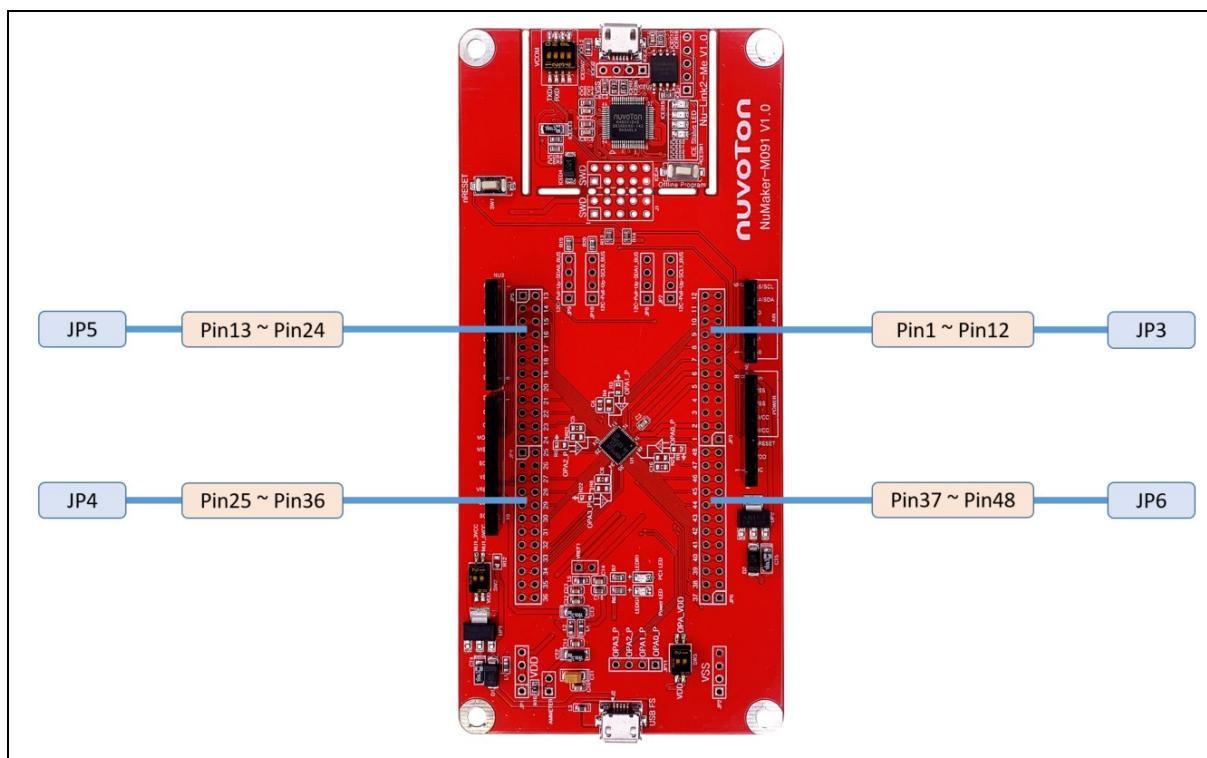


Figure 3-3 M091 Extension Connectors

Header	M091YD2AE	
	Pin No.	Function
JP3	JP3.1	1 OPA_VDD
	JP3.2	2 VREF
	JP3.3	3 VSS
	JP3.4	4 VSS
	JP3.5	5 VDD
	JP3.6	6 AVDD
	JP3.7	7 nRESET/ICE_CLK
	JP3.8	8 PF.0 / ICE_DAT
	JP3.9	9 PA.15 / UART0_RXD / BPWM1_CH5
	JP3.10	10 PA.3 / DAC3_OUT / SPI0_SS / I2C0_SMBAL / I2C1_SCL / CLK0
	JP3.11	11 OPA1_P
	JP3.12	12 OPA1_N
JP5	JP5.1	13 OPA1_O
	JP5.2	14 PA.2 / DAC2_OUT / SPI0_CLK / I2C0_SMBSUS / I2C1_SDA
	JP5.3	15 PA.1 / DAC1_OUT / SPI0_MISO / UART0_TXD
	JP5.4	16 PA.0 / DAC0_OUT / SPI0莫斯I / UART0_RXD
	JP5.5	17 PB.15 / ADC0_CH15 / SPI0_SS / UART0_nCTS / TM0_EXT
	JP5.6	18 PB.14 / ADC0_CH14 / SPI0_CLK / UART0_nRTS / TM1_EXT / CLK0
	JP5.7	19 PB.13 / ADC0_CH13 / SPI0_MISO / UART0_TXD / TM0_EXT
	JP5.8	20 PB.12 / ADC0_CH12 / SPI0_MOSI / UART0_RXD / TM1_EXT
	JP5.9	21 PB.11 / ADC0_CH11 / UART0_nCTS / UART0_TXD / I2C1_SCL / BPWM1_CH0
	JP5.10	22 PF.3 / UART0_TXD / I2C0_SCL / BPWM1_CH0
	JP5.11	23 OPA2_O
	JP5.12	24 OPA2_N
JP4	JP4.1	25 OPA2_P
	JP4.2	26 OPA_VSS
	JP4.3	27 PF.2 / UART0_RXD / I2C0_SDA / BPWM1_CH1
	JP4.4	28 PB.10 / ADC0_CH10 / UART0_nRTS / I2C1_SDA / BPWM1_CH1
	JP4.5	29 PB.9 / ADC0_CH9 / UART0_TXD / BPWM1_CH2
	JP4.6	30 PB.8 / ADC0_CH8 / UART0_RXD / BPWM1_CH3
	JP4.7	31 OPA3_P
	JP4.8	32 OPA3_N
	JP4.9	33 OPA3_O
	JP4.10	34 PB.7 / ADC0_CH7 / BPWM1_CH4 / INT5
	JP4.11	35 PB.6 / ADC0_CH6 / BPWM1_CH5 / INT4

Header		M091YD2AE	
	Pin No.	Function	
	JP4.12	36	PB.5 / ADC0_CH5 / I2C0_SCL / TM0 / INT0
JP6	JP6.1	37	PB.4 / ADC0_CH4 / I2C0_SDA / TM1 / INT1
	JP6.2	38	PB.3 / ADC0_CH3 / I2C1_SCL / BPWM1_CH2 / TM0 / INT2
	JP6.3	39	PB.2 / ADC0_CH2 / I2C1_SDA / BPWM1_CH3 / TM1 / INT3
	JP6.4	40	PC.1 / I2C0_SCL / ADC0_ST
	JP6.5	41	PB.1 / ADC0_CH1 / UART0_RXD / I2C1_SCL / BPWM1_CH4
	JP6.6	42	PA.14 / UART0_TXD / BPWM1_CH4
	JP6.7	43	PA.12 / I2C1_SCL / BPWM1_CH2
	JP6.8	44	PA.13 / I2C1_SDA / BPWM1_CH3
	JP6.9	45	PB.0 / ADC0_CH0 / I2C1_SDA
	JP6.10	46	OPA0_O
	JP6.11	47	OPA0_N
	JP6.12	48	OPA0_P

Table 3-2 M091 Full-pin Extension Connectors and GPIO Function List

3.3.2 Arduino UNO Compatible Extension Connectors

Figure 3-4 shows the Arduino UNO compatible extension connectors.

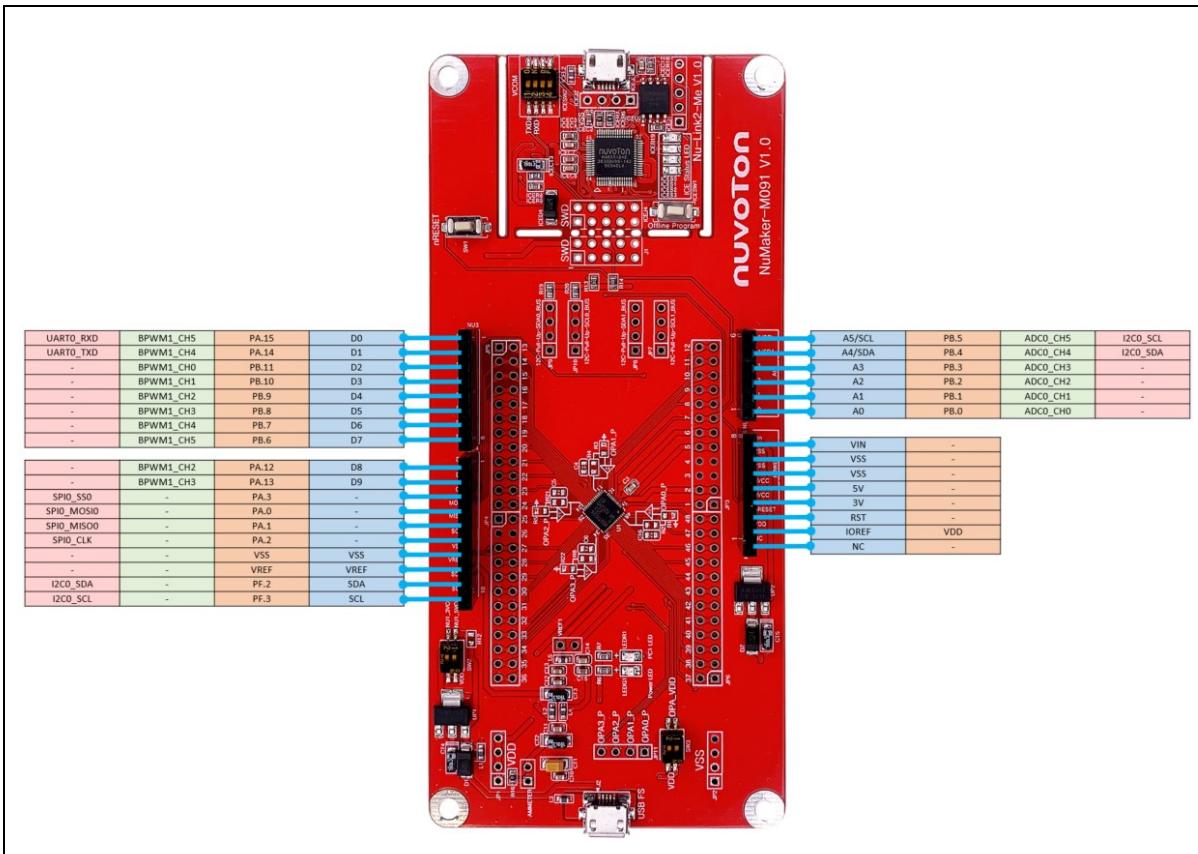


Figure 3-4 Arduino UNO Compatible Extension Connectors

Header		NuMaker-M091YD		Header		NuMaker-M091YD	
		Compatible to Arduino UNO	GPIO Pin of M091			Compatible to Arduino UNO	GPIO Pin of NUC240V
NU3	NU3.1	D0/RX	PA15	NU2	NU2.6	A5/SCL	PB5
	NU3.2	D1/TX	PA14		NU2.5	A4/SDA	PB4
	NU3.3	D2	PB11		NU2.4	A3	PB3
	NU3.4	D3	PB10		NU2.3	A2	PB2
	NU3.5	D4	PB9		NU2.2	A1	PB1
	NU3.6	D5	PB8		NU2.1	A0	PB0
	NU3.7	D6	PB7		NU1.8	VIN	-
	NU3.8	D7	PB6		NU1.7	VSS	
NU4	NU4.1	D8	PA12	NU1	NU1.6	VSS	
	NU4.2	D9	PA13		NU1.5	5V	
	NU4.3	SS	PA3		NU1.4	3V	
	NU4.4	MOSI	PA0		NU1.3	RST	nRESET
	NU4.5	MISO	PA1		NU1.2	IOREF	V _{REF}
	NU4.6	SCK	PA2		NU1.1	NC	-
	NU4.7	VSS	V _{SS}				
	NU4.8	VREF	V _{REF}				
	NU4.9	SDA	PF2				
	NU4.10	SCL	PF3				

Table 3-3 Arduino UNO Extension Connectors and M091 Mapping GPIO List

3.4 Power Supply Configuration

The NuMaker-M091YD is able to adopt multiple power supplies. External power sources include NU1 Vin (7 V to 12 V), V_{DD} (depending on the target chip operating voltage), and PC through USB connector. By using switches and voltage regulator, multiple power domains can be created on the NuMaker-M091YD.

3.4.1 VIN Power Source

Table 3-4 presents the Vin power source.

Connector	Net Name in Schematic	Description
NU1 pin8	NU1_VIN	Board external power source, with voltage range from 7 V to 12 V. The voltage regulator UP2 converts the NU1 pin8 input voltage to 5 V and supplies it to NU1_5VCC.

Table 3-4 Vin Power Source

3.4.2 5 V Power Sources

Table 3-5 presents the 5 V power sources.

Connector	Net Name in Schematic	Description
ICEJ3	USB_HS_VBUS	ICE USB connector supplies 5 V power from PC to M091 target board and Nu-Link2-Me.
J2	USB_VBUS	USB connector on NuMaker-M091YD supplies 5 V power from PC to M091 target board and Nu-Link2-Me.
NU1 pin5	NU1_5VCC	ICEJ3, J2 or NU1 pin8 supplies 5 V power to NU1 pin5. NU1 pin5 supplies 5 V power to target chip or Arduino adapter board.

Table 3-5 5 V Power Sources

3.4.3 3.3 V Power Sources

Table 3-6 presents the 3.3 V power sources.

Voltage Regulator	5 V Source	Description
ICEUP1	USB_HS_VBUS	ICEUP1 converts USB_HS_VBUS to 3.3 V and supplies 3.3 V to M091 target board or ICE chip.
UP1	USB_VBUS	UP1 converts USB_VBUS to 3.3 V and supplies 3.3 V to M091 target board. Note: SW2.2 (NU1_3VCC) should be switched to ON.
UP1	NU1_5VCC	UP1 converts NU1_5VCC to 3.3 V and supplies 3.3 V to M091 target board. Note: SW2.2 (NU1_3VCC) should be switched to ON.

Table 3-6 3.3 V Power Sources

3.4.4 1.8 V Power Sources

Table 3-7 presents the 1.8 V power source.

Voltage Regular	5V Source	Description
ICEUP2	USB_HS_VBUS	ICEUP2 converts USB_HS_VBUS to 1.8 V and supplies 1.8 V to M091 target board or ICE chip.

Table 3-7 1.8 V Power Sources

3.4.5 Power Connectors

Table 3-8 presents the power connectors.

Connector	Description
JP1	V _{DD} connector on the NuMaker-M091YD.
JP2	V _{SS} connector on the NuMaker-M091YD

Table 3-8 Power Connectors

3.4.6 USB Connectors

Table 3-9 presents the USB connectors.

Connector	Description
ICEJ3	ICE USB connector on Nu-Link2-Me for power supply, debugging and programming from PC.
J2	USB FS connector on NuMaker-M091YD for power supply.

Table 3-9 USB Connectors

3.4.7 Power Switches

Table 3-10 presents the power switches.

Switch	Description
ICEJPR1	Configures the target chip operating voltage at 1.8 V / 3.3 V / 5 V.
ICEJPR2	Configures the ICE chip operating voltage at 1.8 V / 3.3 V.
SW2	Configures the target chip operating voltage at 3.3 V / 5 V.

Table 3-10 Power Switches

3.4.8 Power Supply Models

3.4.8.1 External Power Supply through Nu-Link2-Me to Target Chip

The external power supply source on Nu-Link2-Me is shown in Figure 3-5.



Figure 3-5 External Power Supply Sources on Nu-Link2-Me

To use ICEJ3 as external power supply source with Nu-Link2-Me, please follow the steps below:

Solder the resistor on ICEJPR1 (MCUVCC) depending on the target chip operating voltage.

Solder the resistor on ICEJPR2 (ICEVCC) depending on the ICE chip operating voltage.

Switch the SW2 to OFF.

Connect the external power supply to ICEJ3.

Table 3-11 presents all power models when supplying external power through Nu-Link2-Me. The Nu-Link2-Me external power sources are highlighted in yellow.

Model	Target Chip Voltage	ICEJ3	ICEJPR1 (MCUVCC) Selection ^[1]	ICEJPR2 (ICEVCC) Selection ^[2]	ICE Chip Voltage	SW2 Selection	J2	Vin	JP1	
1	1.8 V	Connect to PC	1.8 V	1.8 V	1.8 V	Off	-	-	1.8 V output	
2	3.3 V	Connect to PC	3.3 V (default)	3.3 V (default)	3.3 V	Off	-	-	3.3 V output	
3	5 V	Connect to PC	5 V	3.3 V (default)	3.3 V	Off	-	-	5 V output	
Note:		1. 0 Ω should be soldered between ICEJPR1's MCUVCC and 1.8 V / 3.3 V / 5 V. 2. 0 Ω should be soldered between ICEJPR2's ICEVCC and 1.8 V / 3.3 V. 3. -: Unused.								

Table 3-11 Supply External Power through Nu-Link2-Me

3.4.8.2 External Power Supply through M091 Target Board to Target Chip

The external power supply sources on M091 target board are shown in Figure 3-6.

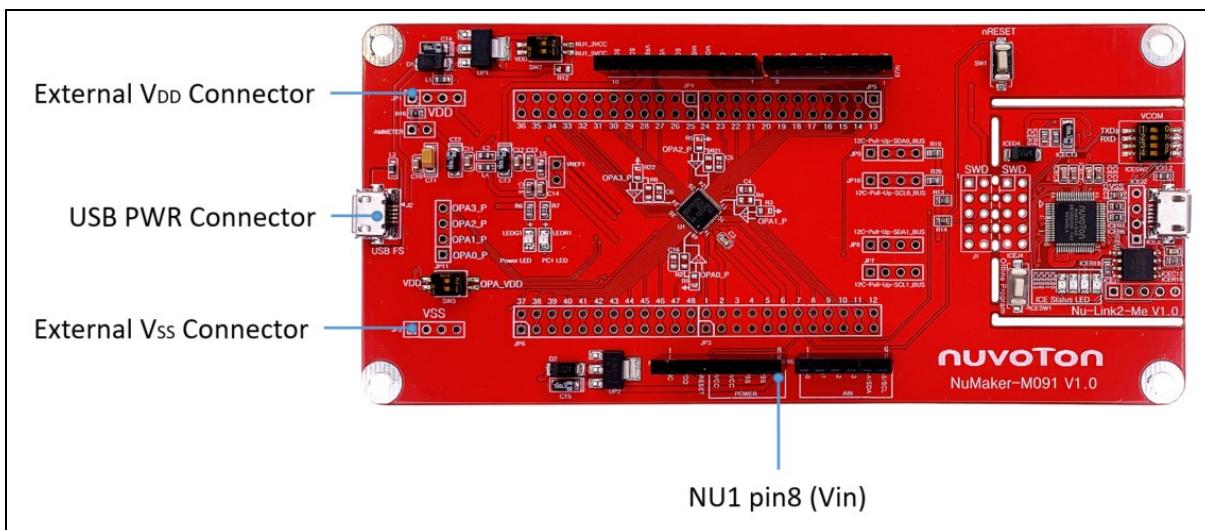


Figure 3-6 External Power Supply Sources on M091 Target Board

To use Vin or J2 as external power supply source, please follow the steps below:

Switch the SW2 depending on the target chip operating voltage.

Remove the resistor on ICEJPR1 (MCUVCC).

Solder the resistor on ICEJPR2 (ICEVCC) depending on the ICE chip operating voltage.

Connect the external power supply to Vin or J2.

To use JP1 as external power supply source, please follow the steps below:

1. Switch the SW2 to OFF.

Remove the resistor on ICEJPR1 (MCUVCC).

Solder the resistor on ICEJPR2 (ICEVCC) depending on the ICE chip operating voltage.

Connect ICEJ3 to PC.

Connect the external power supply to JP1.

To use Vin or J2 as external power supply source with Nu-Link2-Me detached from NuMaker-M091YD, please follow the steps below:

1. Switch the SW2 depending on the target chip operating voltage.

Detach the Nu-Link2-Me from NuMaker-M091YD.

Connect the external power supply to Vin or J2.

To use JP1 as external power supply source with Nu-Link2-Me detached from NuMaker-M091YD, please follow the steps below:

1. Switch the SW2 to OFF.

Detach the Nu-Link2-Me from NuMaker-M091YD.

Connect the external power supply to JP1.

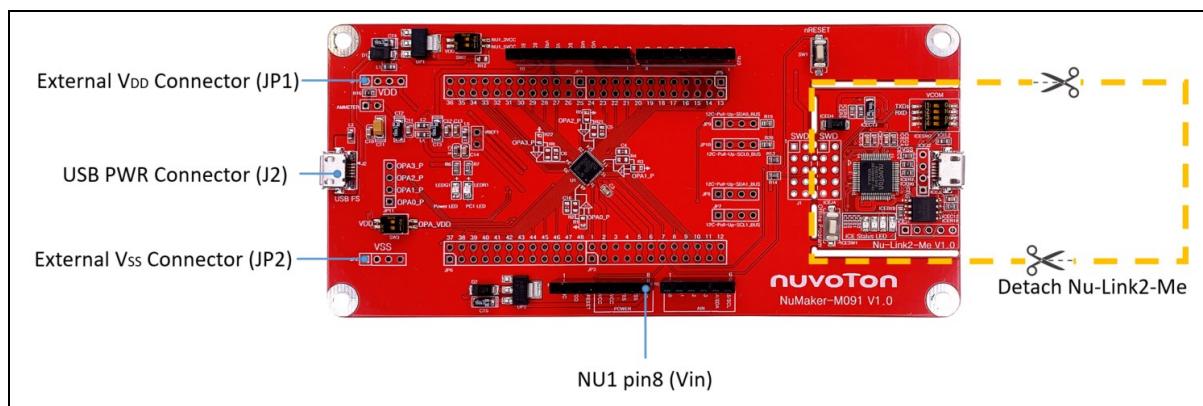


Figure 3-7 Detach the Nu-Link2-Me from NuMaker-M091YD

Table 3-12 presents all power models when supplies external power through M091 target board. The M091 target board external power sources are highlighted in yellow.

Model	Target Chip Voltage	Vin ^[1]	J2 ^[1]	ICEJ3	SW2 Selection	JP1 ^[2]	ICEJPR1 (MCUVCC) Selection ^[3]	ICEJPR2 (ICEVCC) Selection ^[4]	ICE Chip Voltage ^[5]
4	3.3 V	7 V ~ 12 V Input	-	-	NU1 3VCC	3.3 V output	Remove resistor	3.3 V	3.3 V
5	3.3 V	-	Connect to PC	-	NU1 3VCC	3.3 V output	Remove resistor	3.3 V	3.3 V
6	5 V	7 V ~ 12 V Input	-	-	NU1 5VCC	5 V output	Remove resistor	3.3 V	3.3 V
7	5 V	-	Connect to PC	-	NU1 5VCC	5 V output	Remove resistor	3.3 V	3.3 V
8	2.5 V ~ 5.5 V	-	-	Connect to PC	OFF	DC Input 2.5 V ~ 5.5 V	Remove resistor	1.8 V / 3.3 V	1.8 V / 3.3 V
9	2.5 V ~ 5.5 V	-	-	Nu-Link2-Me removed	OFF	DC Input 2.5 V ~ 5.5 V	-	-	-

Note:

1. The Vin input voltage will be converted by voltage regulator UP2 to 5 V. Supplying external power to Vin or J2 can provide 5 V to NU1 pin5 (5V) and 3.3 V to NU1 pin4 (3VCC).
2. JP1 external power input only provides voltage to target chip.
3. 0 Ω should be removed from ICEJPR1's MCUVCC and 1.8 V / 3.3 V / 5 V.
4. 0 Ω should be soldered between ICEJPR2's ICEVCC and 1.8 V / 3.3 V.
5. The ICE chip voltage should be close to the target chip voltage.
6. -: Unused

Table 3-12 Supply External Power for M091 Target Board

3.5 External Reference Voltage Connector

Table 3-13 External Reference Voltage Connector presents the external reference voltage connector.

Connector	Description
VREF1	Connector for user to connect to the external reference voltage pin of the target chip. User needs to remove the L5 ferrite bead.

Table 3-13 External Reference Voltage Connector

3.6 Ammeter Connector

User can refer to the sample code in M091 series BSP - SYS_PowerDown_MinCurrent and Figure 3-8 to measure the minimum current in Power-down mode. Figure 3-9 shows the path of the sample code, which has relative settings of entering Power-down mode.

Table 3-14 presents the ammeter connector.

Connector	Description
AMMETER	Connector for user to measure the target chip power consumption easily. User needs to remove the R16 resistor.

Table 3-14 Ammeter Connector

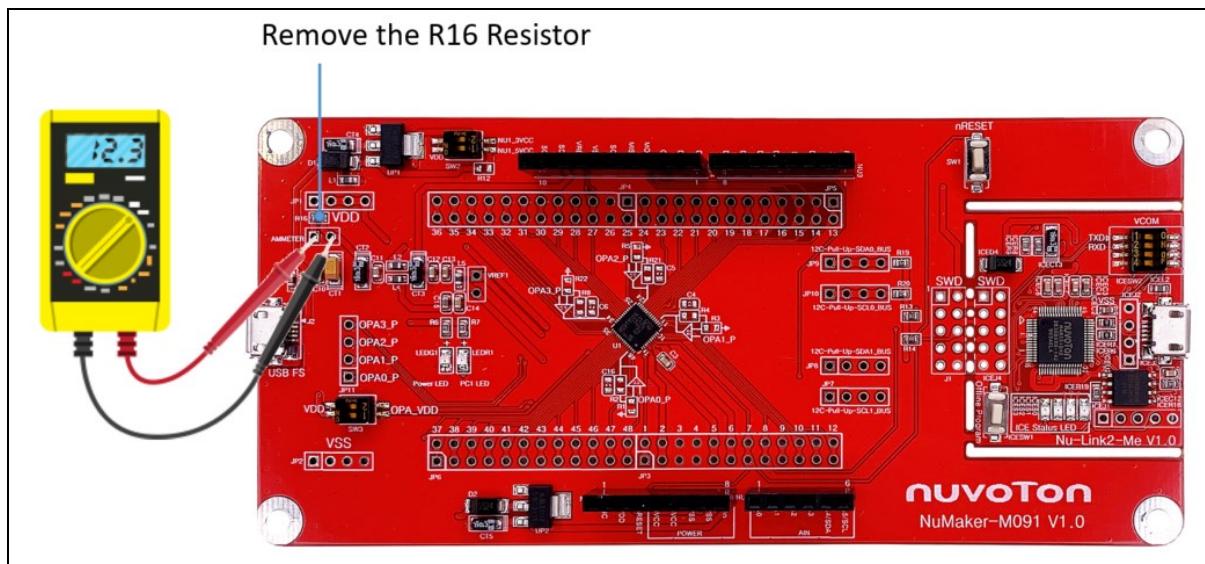


Figure 3-8 Wiring between Ammeter Connector and Ammeter

📁 M091_BSP_CMSIS
📁 SampleCode
📁 StdDriver
📁 SYS_PowerDown_MinCurrent

Figure 3-9 Project Path of SYS_PowerDown_MinCurrent

3.7 Push Buttons

Table 3-15 presents the push buttons.

Component	Description
ICESW1	Offline program button to start offline ICP programming the target chip.
SW1	Reset button to reset the target chip.

Table 3-15 Push Buttons

3.8 LEDs

Table 3-16 presents the LEDs.

Component	Description
Power LED	The power LED indicates that the NuMaker-M091YD is powered.
PC1 LED	The LED is connected to the target chip PC1.
ICES0, ICES1, ICES2 and ICES3	Nu-Link2-Me status LED.

Table 3-16 LEDs

3.9 Nu-Link2-Me

The Nu-Link2-Me is an attached on-board debugger and programmer. The Nu-Link2-Me supports on-chip debugging, online and offline ICP programming through SWD interface. The Nu-Link2-Me also supports virtual COM port (VCOM) for printing debug messages on PC. Besides, the programming status could be shown on the built-in LEDs. Lastly, the Nu-Link2-Me could be detached from the evaluation board and become a stand-alone mass production programmer. For more information about Nu-Link2-Me, please refer to *Nu-Link2-Pro Debugger and Programmer User Manual*.

3.9.1 VCOM Switches

Table 3-17 presents how to set the VCOM function by ICESW2.

ICESW2		
Pin	Function	Description
1	TXD	On: Connect target chip PB.13 (UART0_TXD) to Nu-Link2-Me. Off: Disconnect target chip PB.13 (UART0_TXD) to Nu-Link2-Me.
2	RXD	On: Connect target chip PB.12 (UART0_RXD) to Nu-Link2-Me. Off: Disconnect target chip PB.12 (UART0_RXD) to Nu-Link2-Me.
Note: Pin 3 and 4 is unused.		

Table 3-17 VCOM Function of Nu-Link2-Me

3.9.2 Status LEDs

Table 3-18 presents the status LEDs patterns for different operation on Nu-Link2-Me.

Operation Status	Status LED			
	ICES0	ICES1	ICES2	ICES3
Boot	Flash x 3	Flash x 3	Flash x 3	Flash x 3
Idle	On	-	-	-
One Nu-Link2-Me is selected to connect	Flash x 3	Flash x 3	Flash x 3	On
ICE online (Not connected to a target chip)	On	-	Flash x 3	Flash x 3
ICE online (Connected to a target chip)	On	-	-	On
ICE online (Failed to connect to a target chip)	On	Any	Flash	On
During offline programming	-	On	-	Flash
Offline programming completed	On	-	-	-
Offline programming completed (Auto mode)	On	On	-	-
Offline programming failed	On	Flash	-	-

Note: "Online" means Nu-Link2-Me is connected to ICP Programming Tool, IDE or NuTool.

Table 3-18 Operation Status LED Patterns

3.10 OPA Pin Connector

Table 3-19 presents the OPA pin connection.

Component	Description
OPA_VDD	Connects to 3.3V
OPA_VSS	Ground
OPA0_P	OPA0 non-inverting input pin
OPA0_N	OPA0 inverting input pin
OPA0_O	OPA0 output pin
OPA1_P	OPA1 non-inverting input pin
OPA1_N	OPA1 inverting input pin
OPA1_O	OPA1 output pin
OPA2_P	OPA2 non-inverting input pin
OPA2_N	OPA2 inverting input pin
OPA2_O	OPA2 output pin

OPA3_P	OPA3 non-inverting input pin
OPA3_N	OPA3 inverting input pin
OPA3_O	OPA3 output pin

Table 3-19 OPA Pin Connector

4 QUICK START

4.1 Toolchains Supporting

Install the preferred toolchain. Please make sure at least one of the toolchains has been installed.

- [KEIL MDK Nuvoton edition M0/M23](#)
- [IAR EWARM](#)

4.2 Nuvoton Nu-Link Driver Installation

Download and install the latest Nuvoton Nu-Link Driver.

- Download and install [Nu-Link Keil Driver](#) when using Keil MDK.
- Download and install [Nu-Link IAR Driver](#) when using IAR EWARM.

Please install the Nu-Link USB Driver as well at the end of the installation. The installation is presented in Figure 4-1 and Figure 4-2.

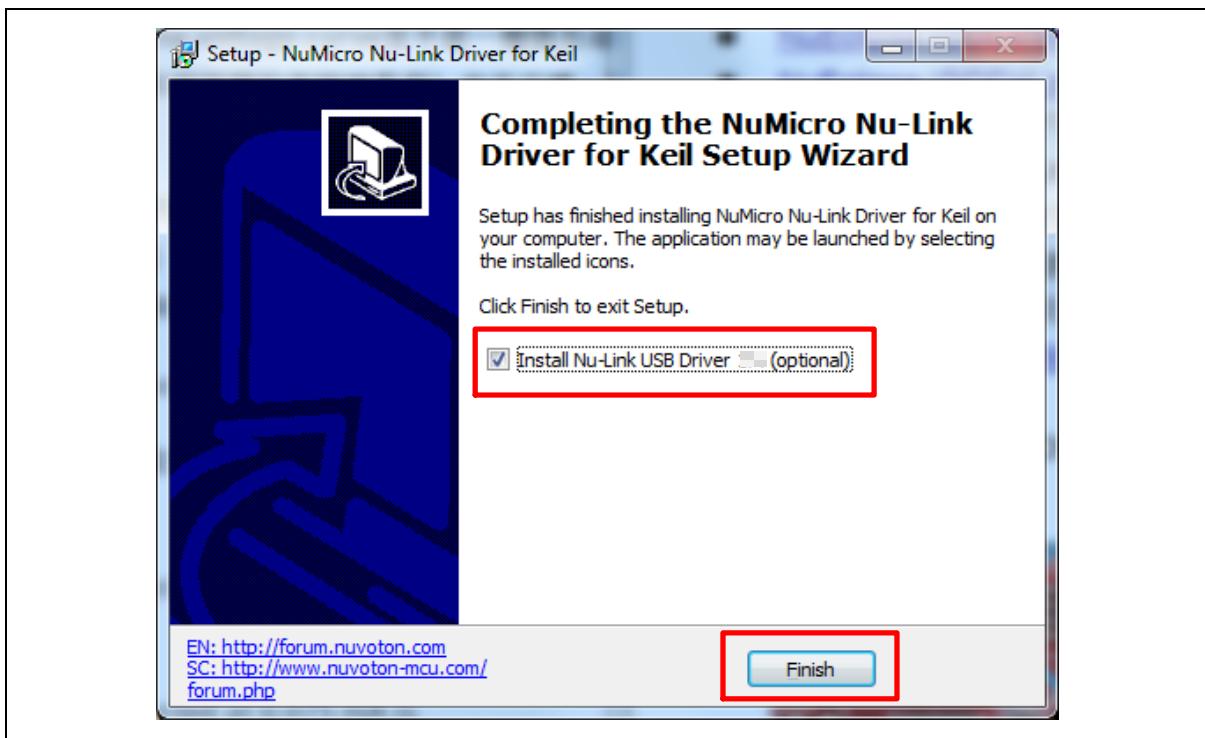


Figure 4-1 Nu-Link USB Driver Installation Setup

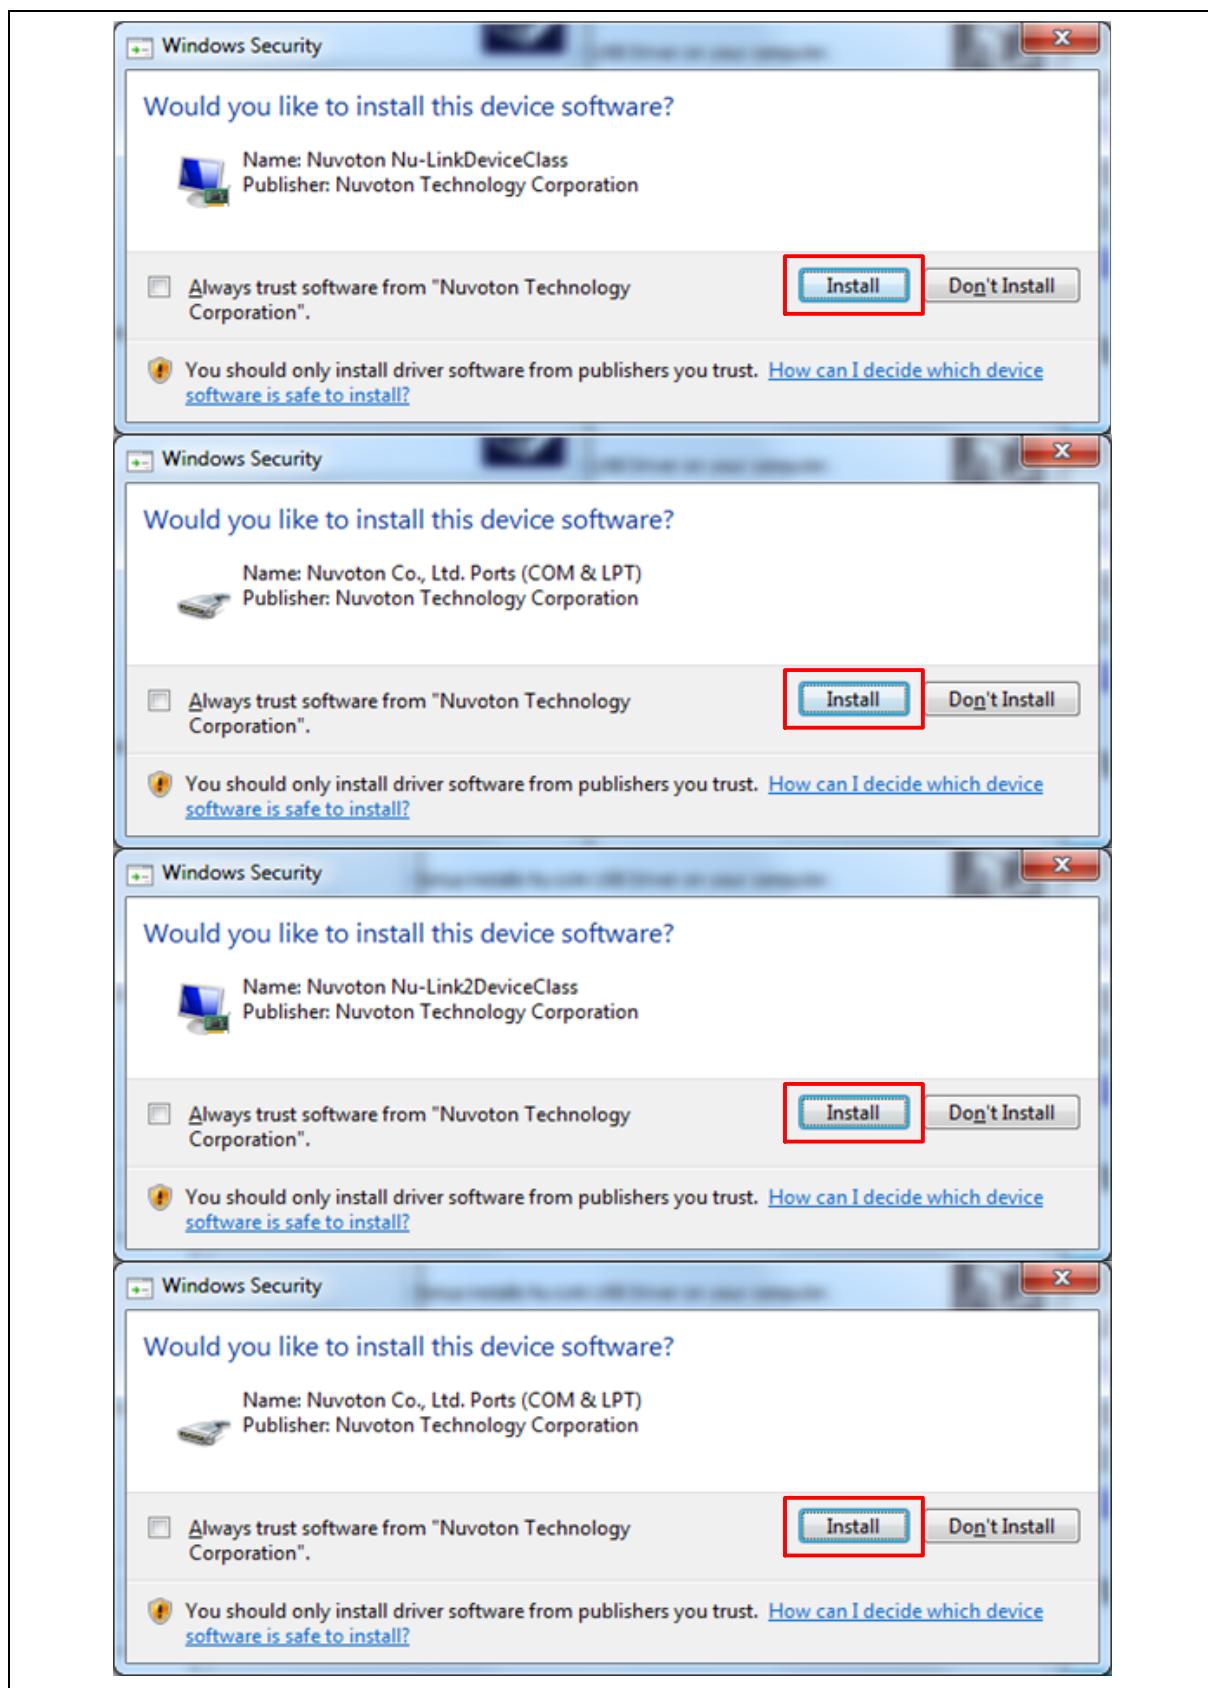


Figure 4-2 Nu-Link USB Driver Installation

4.3 BSP Firmware Download

Download and unzip the [Board Support Package \(BSP\)](#).

4.4 Hardware Setup

Open the virtual COM (VCOM) function by changing Nu-Link2-Me VCOM Switch No. 1 and 2 to ON.

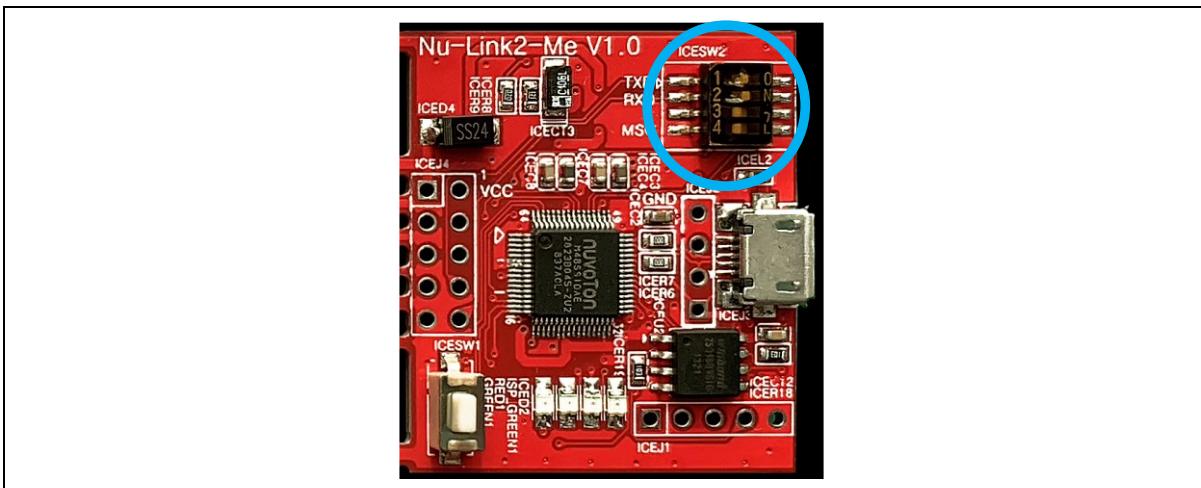


Figure 4-3 Open VCOM Function

Connect the ICE USB connector shown in Figure 4-4 to the PC USB port through a USB cable.

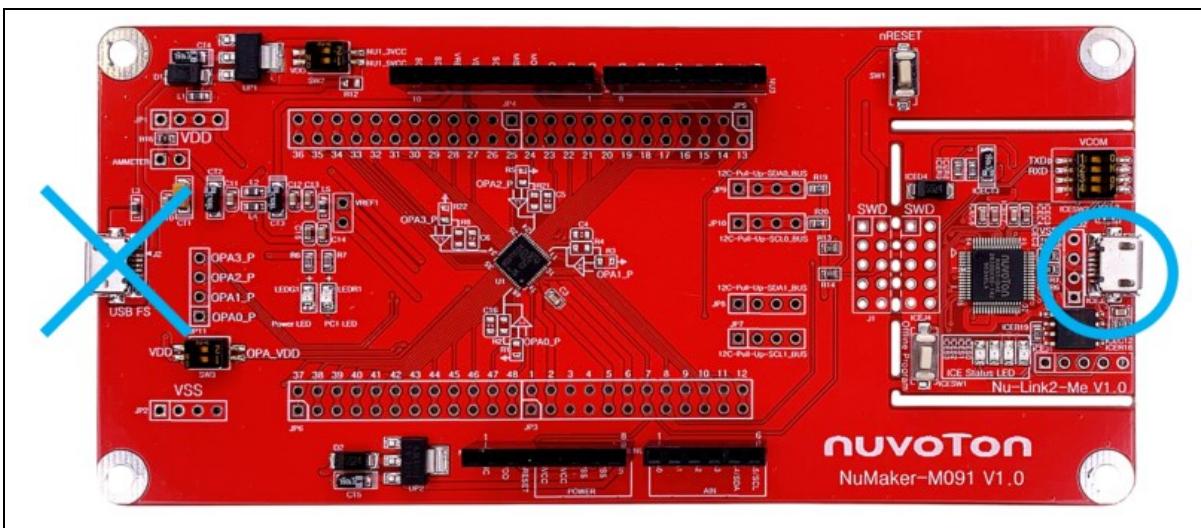


Figure 4-4 ICE USB Connector

Find the “Nuvoton Virtual COM Port” on the Device Manger as Figure 4-5.

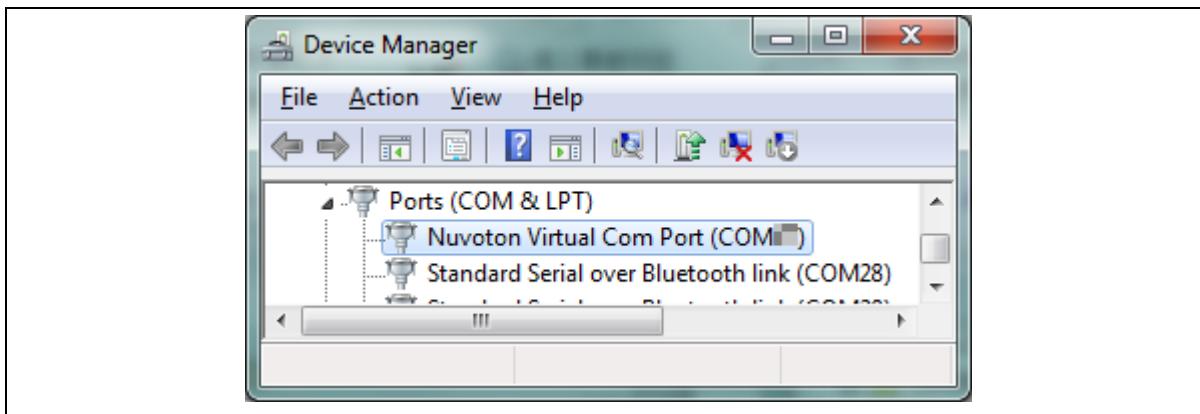


Figure 4-5 Device Manger

Open a serial port terminal, PuTTY for example, to print out debug message. Set the speed to 115200. Figure 4-6 presents the PuTTY session setting.

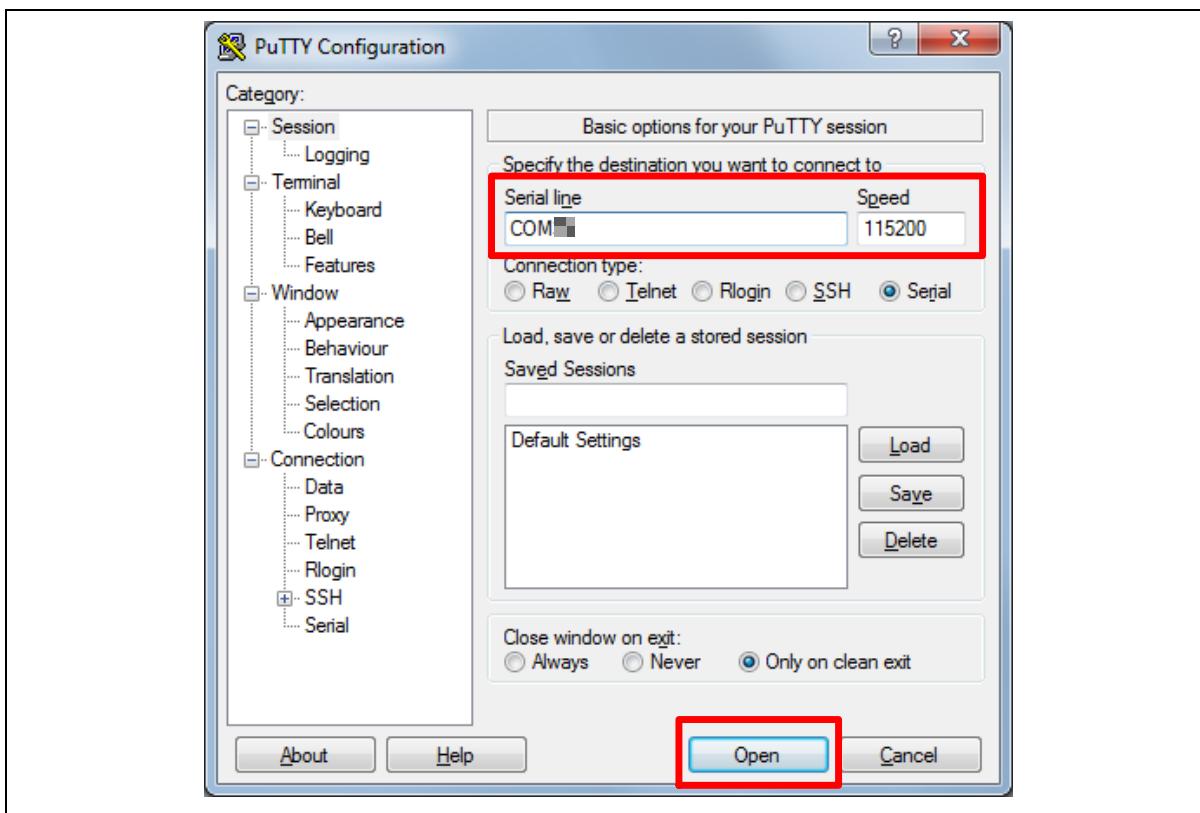


Figure 4-6 PuTTY Session Setting

4.5 Find the Example Project

Use the “Template” project as an example. The project can be found under the BSP folder as shown in Figure 4-7.

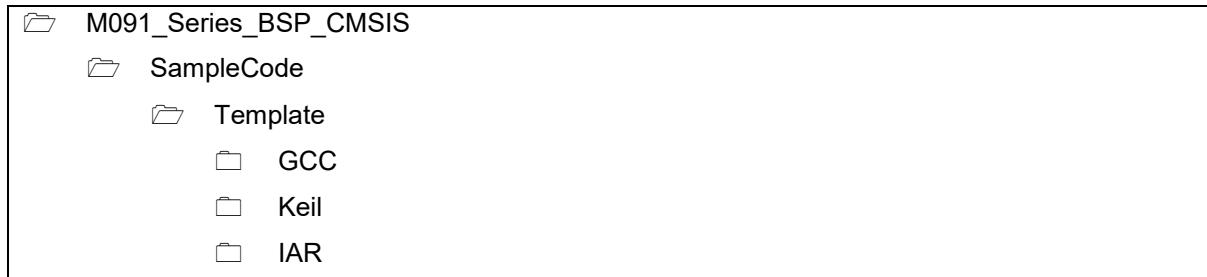


Figure 4-7 Template Project Folder Path

4.6 Execute the Project under Toolchains

Open and execute the project under the toolchain. The section 4.6.1 and 4.6.2 describe the steps of executing project in Keil MDK and IAR EWARM, respectively.

4.6.1 Keil MDK

This section provides steps to beginners on how to run a project by using Keil MDK.

Double-click the “Template.uvproj” to open the project.

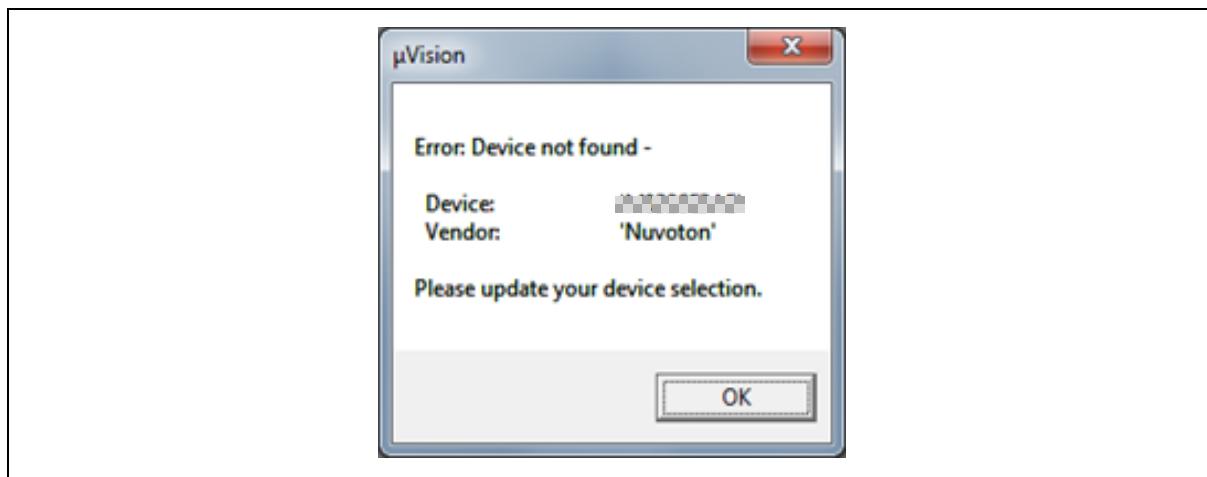


Figure 4-8 Warning Message of “Device not found”

Note: If Figure 4-8 warning message jumps out, please migrate to version 5 format as shown in Figure 4-9. The “.uvproj” filename extension will change to “.uvprojx”.

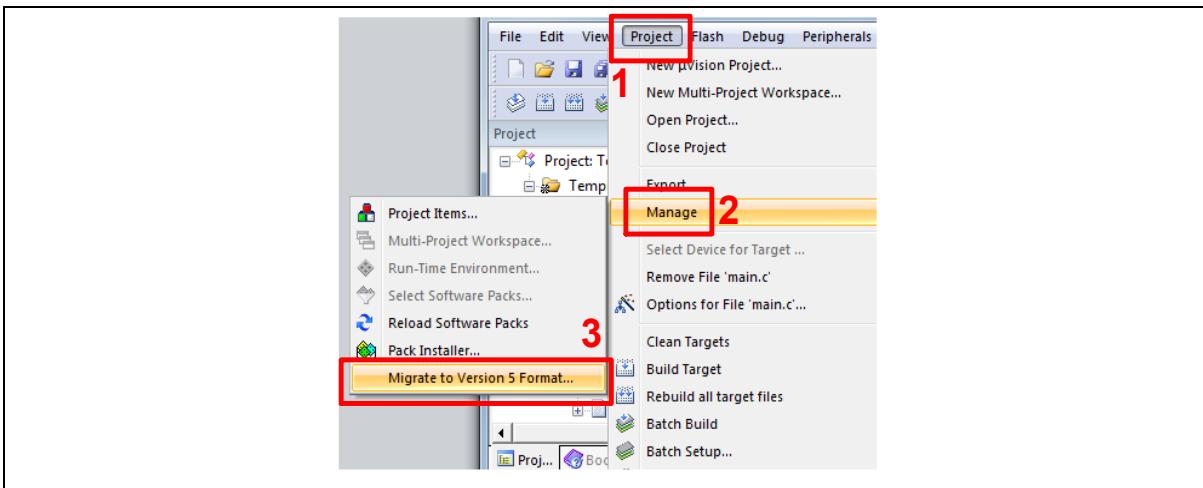


Figure 4-9 Project File Migrate to Version 5 Format

Make sure the debugger is “Nuvoton Nu-Link Debugger” as shown in Figure 4-10 and Figure 4-11.

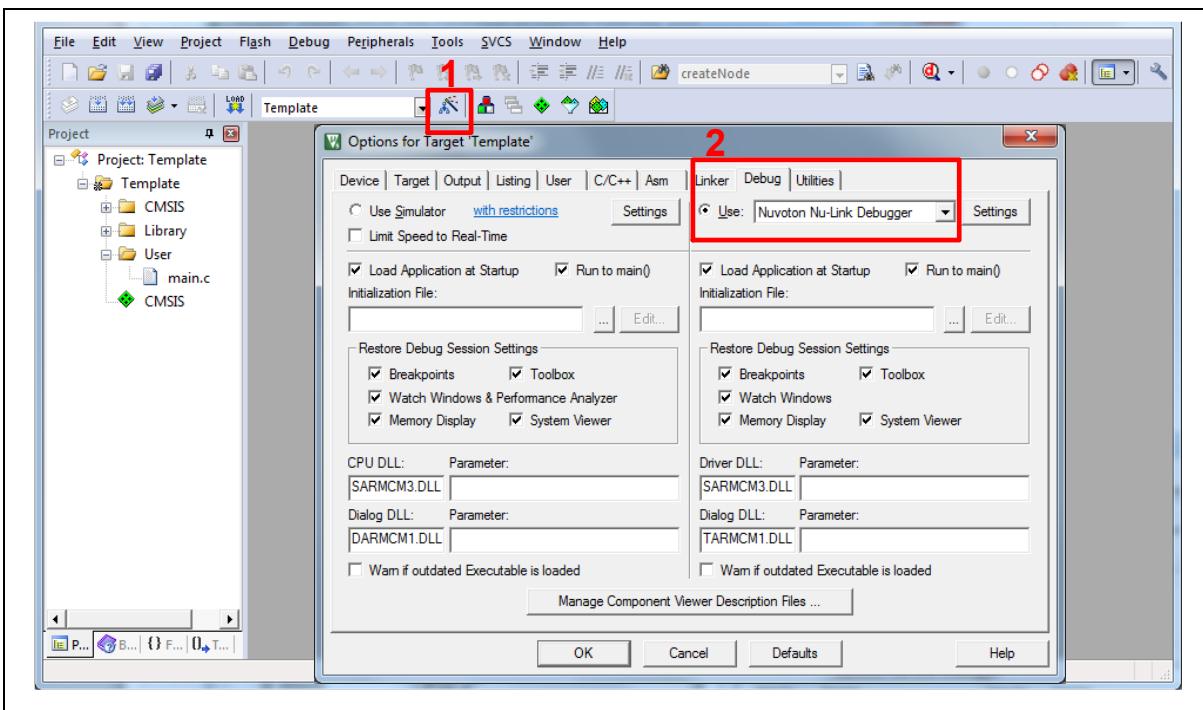


Figure 4-10 Debugger Setting in Options Window

Note: If the dropdown menu in Figure 4-10 does not contain “Nuvoton Nu-Link Debugger” item, please rework section 4.2.

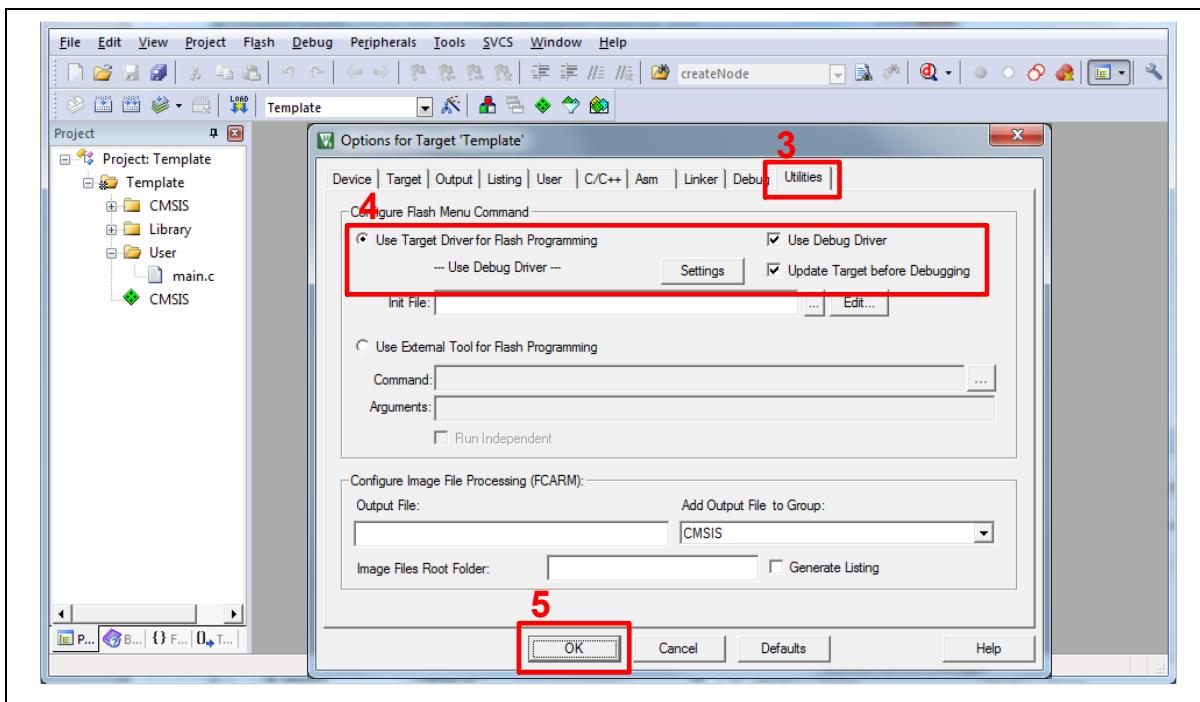


Figure 4-11 Programming Setting in Options Window

Rebuild all target files. After successfully compiling the project, download code to the Flash memory. Click “Start/Stop Debug Section” button to enter debug mode.

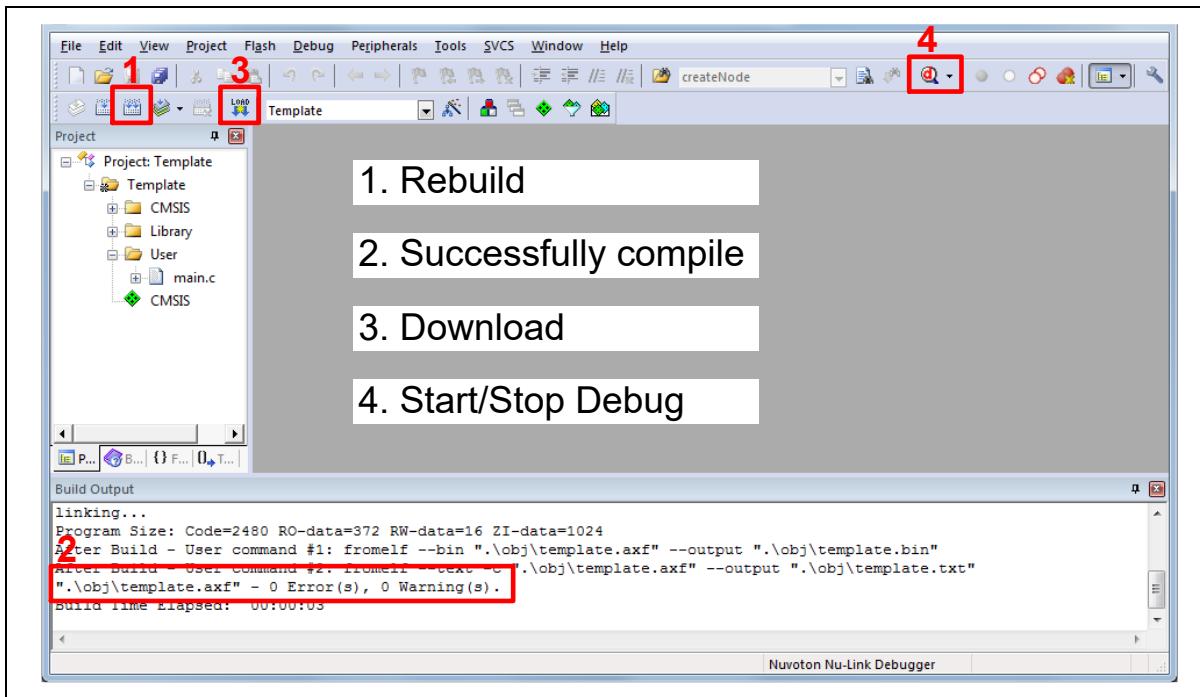


Figure 4-12 Compile and Download the Project

Figure 4-13 shows the debug mode under Keil MDK. Click “Run” and the debug message will be printed out as shown in Figure 4-14. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc.

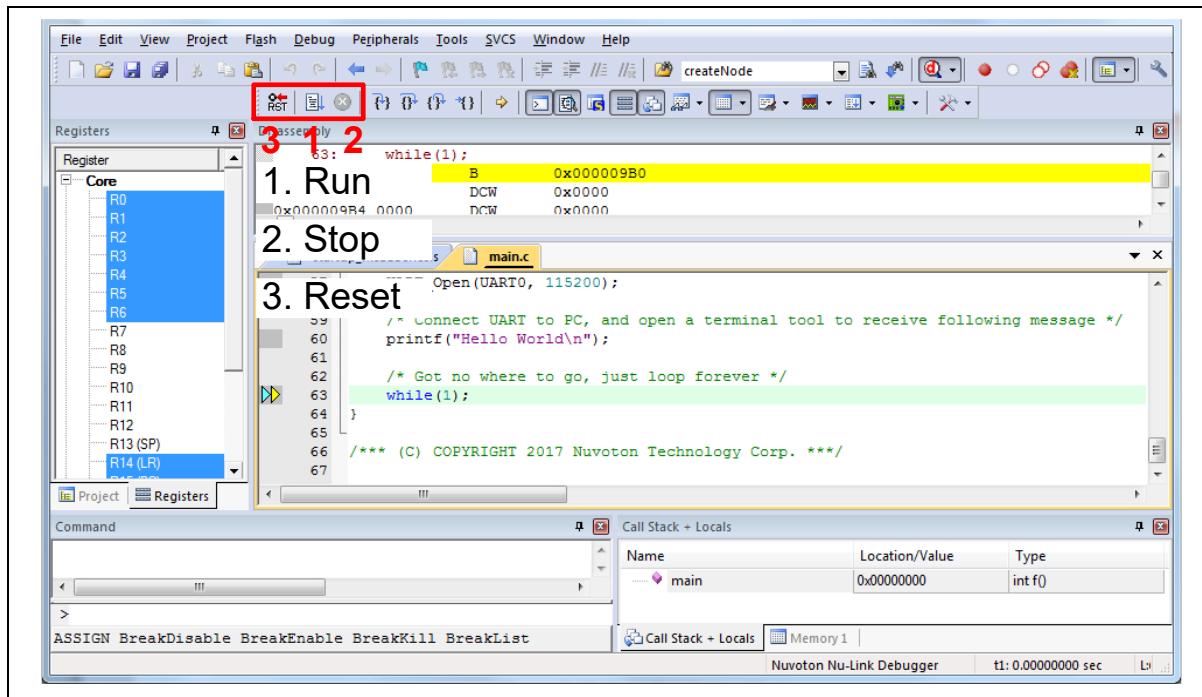


Figure 4-13 Keil MDK Debug Mode



Figure 4-14 Debug Message on Serial Port Terminal Windows

4.6.2 IAR EWARM

This section provides steps to beginners on how to run a project by using IAR EWARM.

Double click the “Template.eww” to open the project.

Make sure the toolbar contains “Nu-Link” item as shown in Figure 4-15.

Note: If the toolbar does not contain “Nu-Link” item, please rework section 4.2.

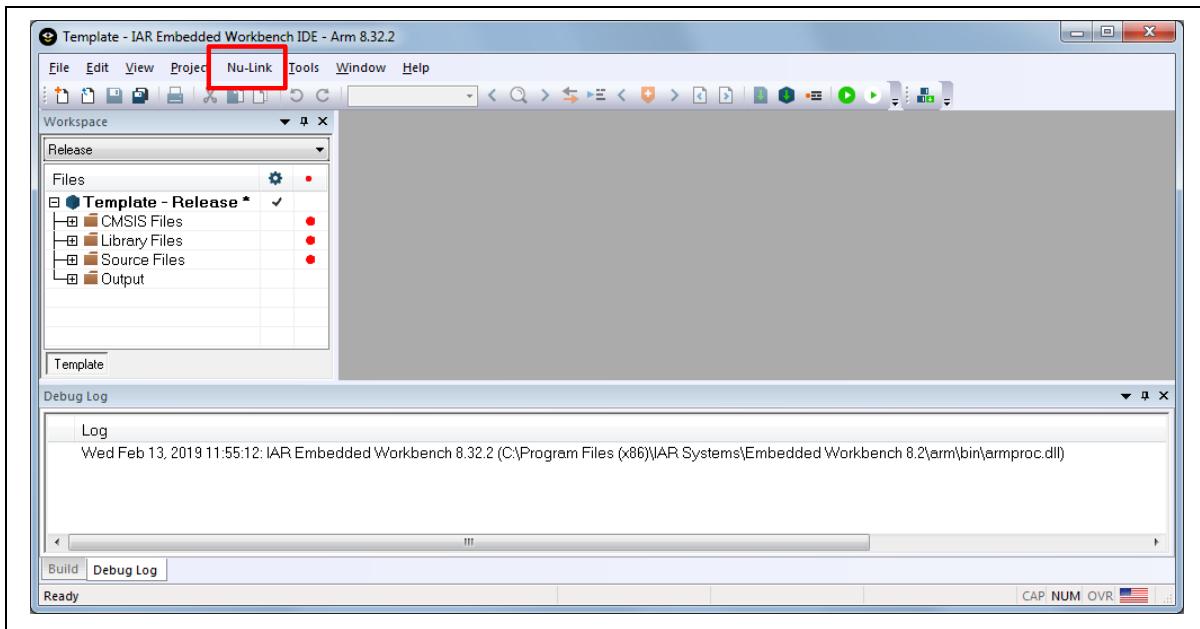


Figure 4-15 IAR EWARM Window

Make a target file as presented in Figure 4-16. After successfully compiling the project, download code to the Flash memory and enter debug mode.

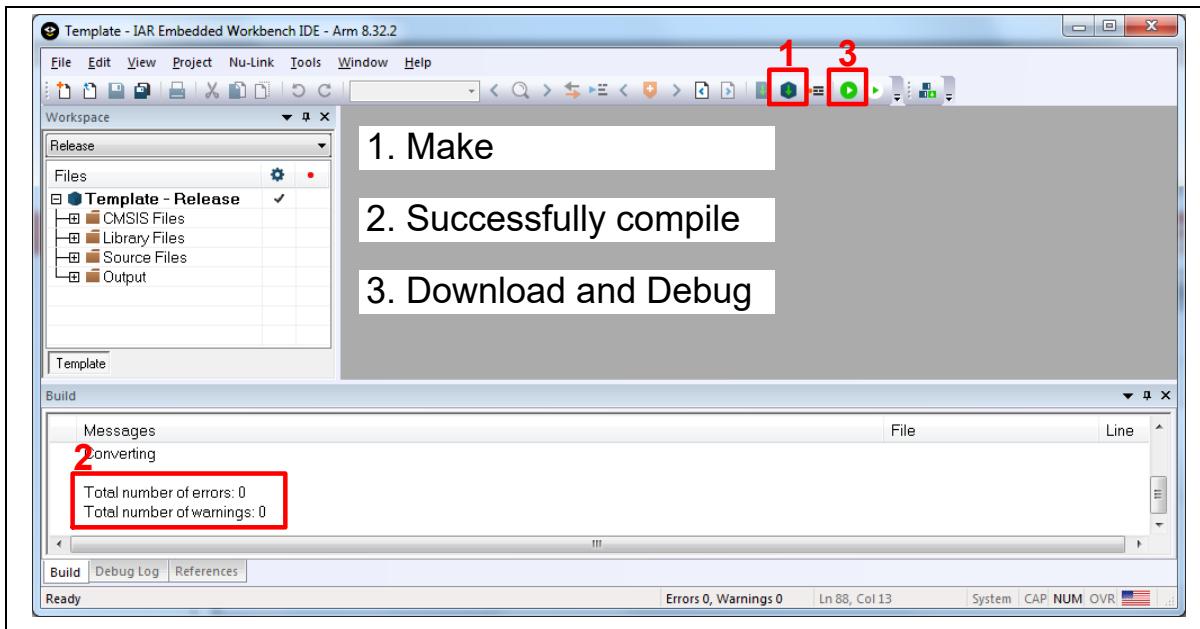


Figure 4-16 Compile and Download the Project

Figure 4-17 shows the debug mode under IAR EWARN. Click “Go” and the debug message will be printed out as shown in Figure 4-18. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc.

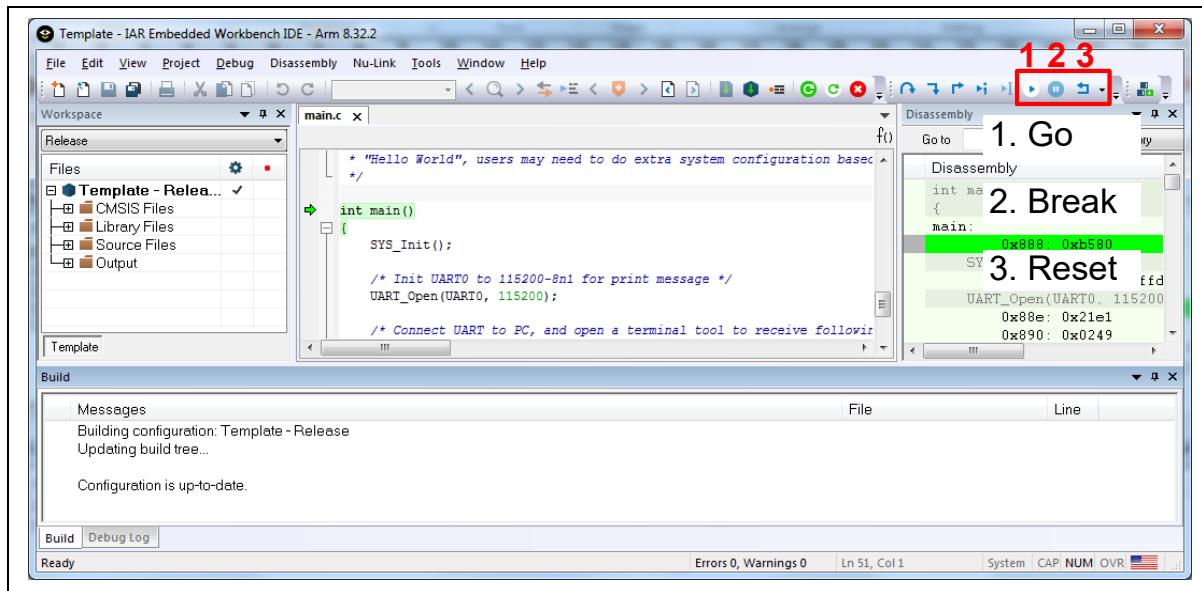


Figure 4-17 IAR EWARM Debug Mode



Figure 4-18 Debug Message on Serial Port Terminal Windows

5 NUMAKER-M091YD SCHEMATICS

5.1 Nu-Link2-Me

Figure 5-1 shows the Nu-Link2-Me circuit.


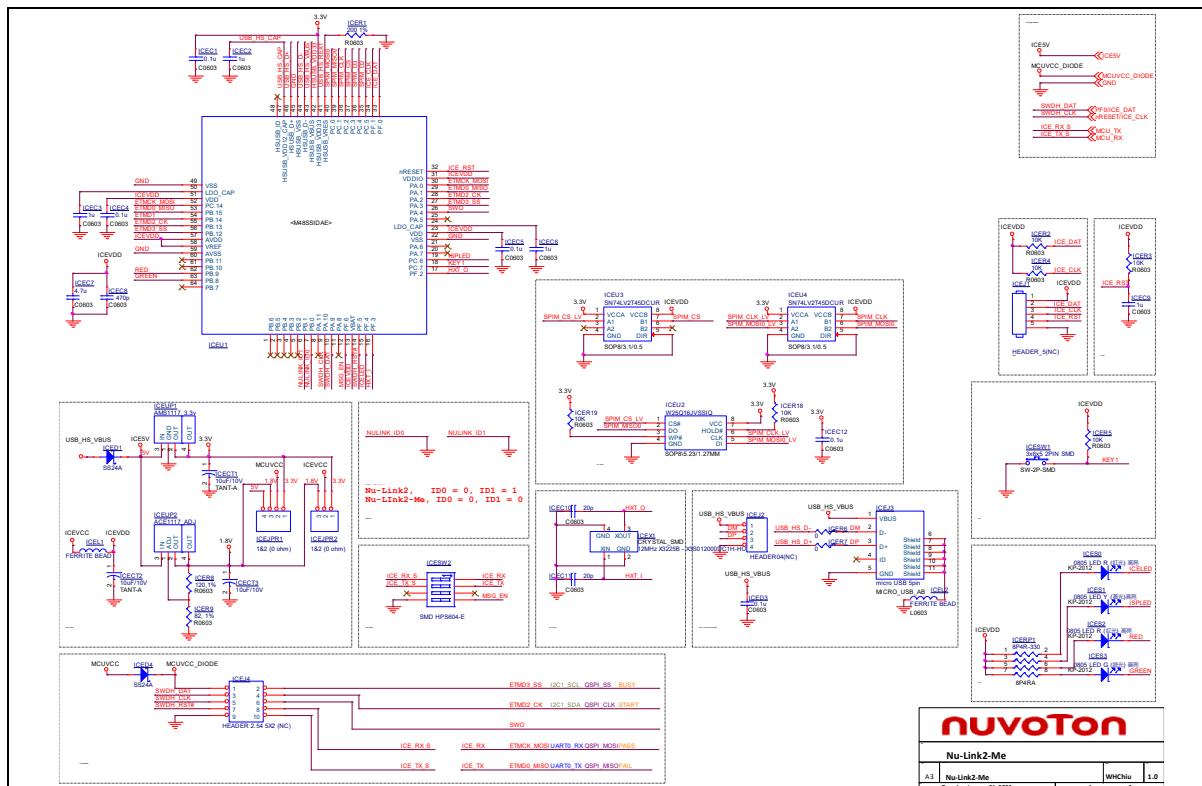


Figure 5-1 Nu-Link2-Me Circuit

5.2 NuMaker-M091YD Schematics

Figure 5-2 shows the M091 target board circuit.

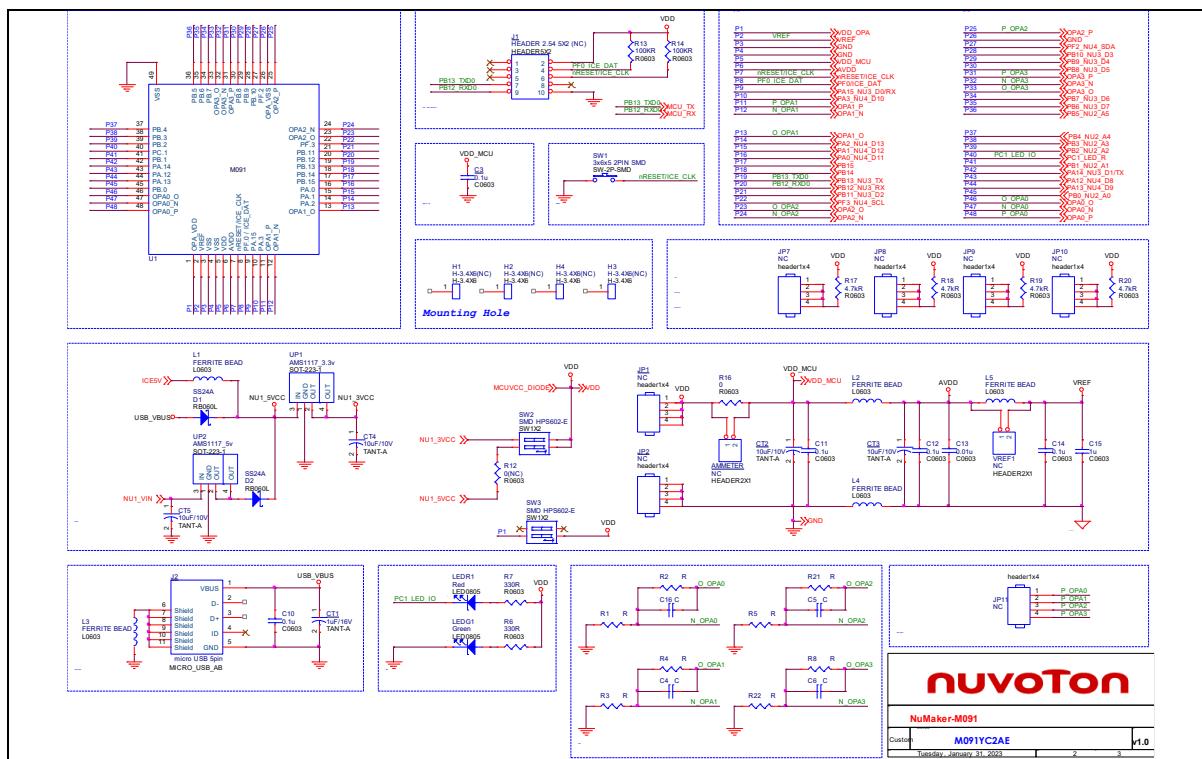

5.3 Extension Connectors

Figure 5-3 shows extension connectors of NuMaker-M091YD.

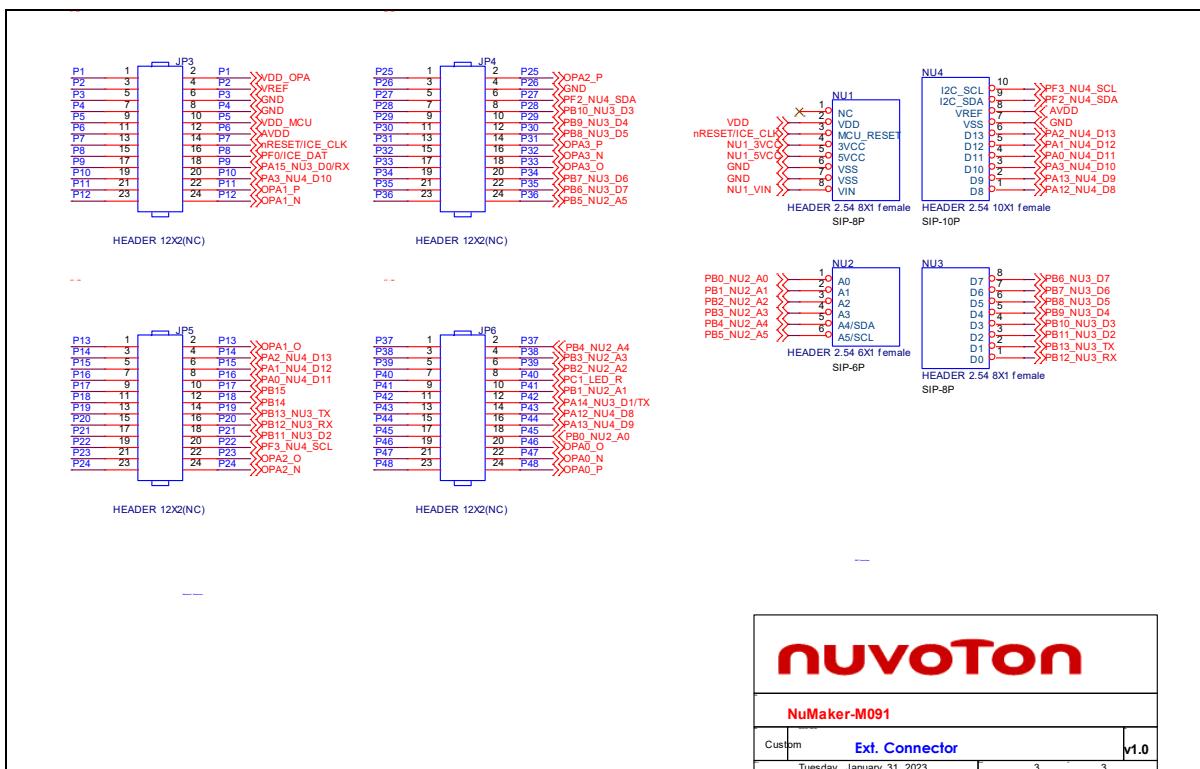


Figure 5-3 Extension Connectors Circuit

5.4 PCB Placement

Figure 5-4 and Figure 5-5 show the front and rear placement of NuMaker-M091YD.

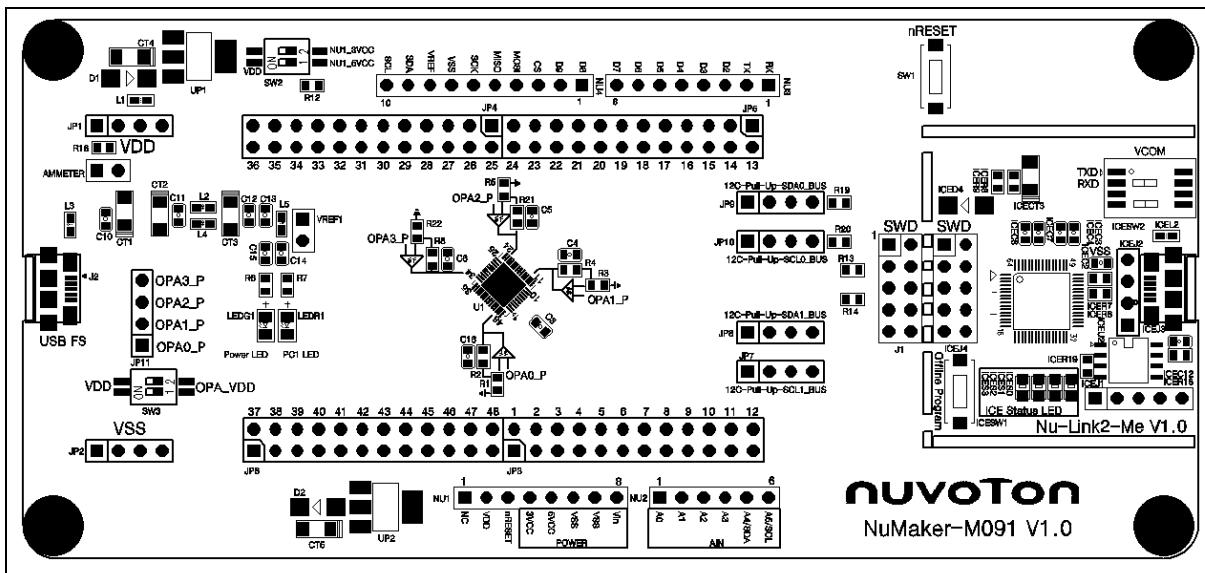


Figure 5-4 Front Placement

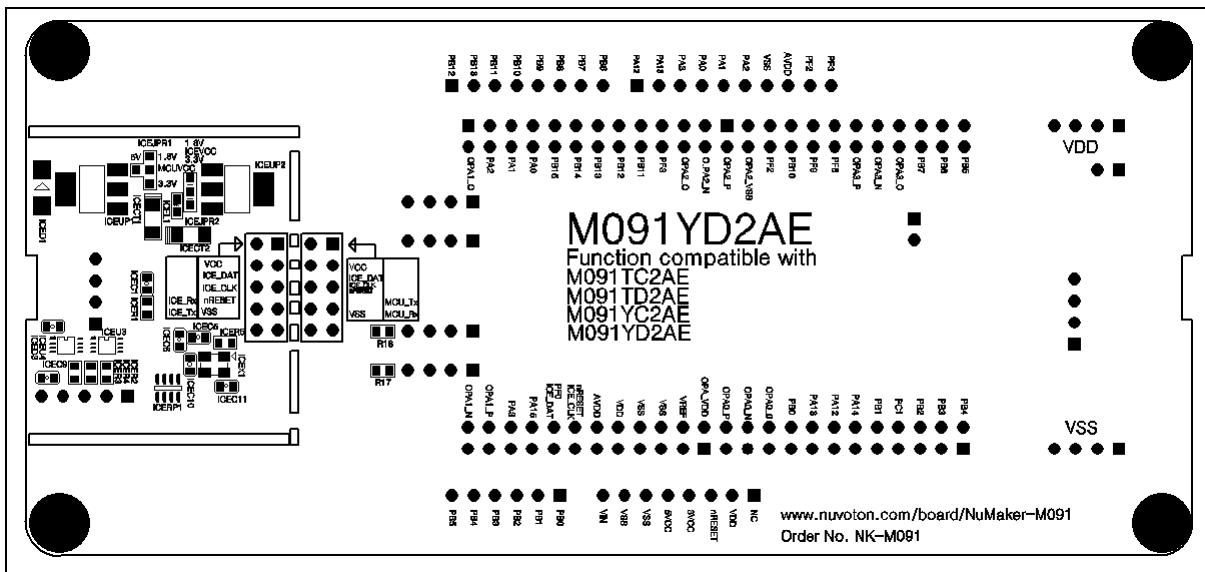


Figure 5-5 Rear Placement

6 REVISION HISTORY

Date	Revision	Description
2023.4.7	1.00	Initial version.

Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

Please note that all data and specifications are subject to change without notice.
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.